

DIVINE
for men

User Guide



TABLE OF CONTENTS

Page

PACKAGE CONTENTS	1
PRECAUTIONS	1
FEATURES	2
KEYS AND DISPLAY DESCRIPTION	2
BASIC OPERATIONS	2

THANKS FOR CHOOSING MEMUP PRODUCT.

PLEASE READ CAREFULLY THIS MANUAL BEFORE USING THE MP3 PLAYER.

THE INFORMATION ON THIS GUIDE COULD BE UPDATED.

FOR ANY REQUEST OR MORE INFORMATION, PLEASE VISIT OUR WEBSITE: WWW.MEMUP.COM

PACKAGE CONTENTS

- ◆ MP3 Player DIVINE For Men
- ◆ USB Cable
- ◆ In-ear earphones with neckstrap
- ◆ Quick strater guide

Environmental policy: "Green Start":

Since now MEMUP integrates all the user guides and video conversion software directly on the multimedia player memory.

PRECAUTIONS

- ◆ Don't lay or leave your unit under heavy objects.
- ◆ Protect your unit far away any liquid.
- ◆ Avoid extreme temperature, moisture and magnetic source

FEATURES

- ◆ MP3 & WMA(>64kbps) music playback
- ◆ Six preset equalizer modes and three repeat modes
- ◆ USB 2.0 S/W
- ◆ Blue & Red LED indicator

PLAYER DESCRIPTION



- 1) ▶|| Play/Pause Key
- 2) ▶▶| Previous key / Volume - key
- 3) |◀◀ Next key / Volume + key

BASIC OPERATIONS

Note:

- A. Whenever turn on the player after last power off, playback begins from the final track before last power off (default from the first track). System adopts the final setting (EQ, Repeat mode and Volume value) before last power off.
- B. If select Shuffle or Normal as the play mode, after playing the final track, player will enter into the music idle mode.
- C. Please download some MP3 or WMA format music files before you use. (The detailed process of download please refer to the USB transferring)

1. Power on/off

Press and hold ▶|| key when the player is in power off status, the player will be power on with Blue LED lighting, and enter into Music idle mode.

Press and hold ▶|| key to turn off the player when it is in music play, pause and idle mode.

2. Play / Pause a Track

Press ▶|| key to start playing MP3 or WMA music when the player is in music idle mode or music pause mode.

Press ▶|| key to pause playing during music playback. Then press this key again to resume playing, and the blue LED will flash regularly.

3. Next/ Previous Track

In music mode, press ▶▶| or |◀◀ key to select next or previous track one by one.

4. Volume adjust

In music mode, press and hold |◀◀ key to decrease the volume, press and hold ▶▶| key to increase the volume, it will increase or decrease 1 level every 0.5s.

System has totally 16 level of volume (0-15), the default value is 10.

EQ setting

Six preset EQ modes for user selection and system default EQ is Normal mode.

In music play mode, press **▶||** key and **▶▶|** key at the same time to cycle through six EQ modes one by one to select desirable one as following sequence: Normal, Classic, Pop, Rock, Jazz & Bass

Play mode setting

Three built-in play modes are provided and system default is shuffle mode.

In music idle/pause mode, press **▶||** key and **|◀◀** key at the same time to cycle through three play modes one by one to select desirable one as following sequence: Normal, Shuffle & Repeat One.

USB Transferring:

- ◆ You can download or upload data from or to PC via the USB connection port by USB cable.
- ◆ Connect the player to the PC, a new Removable Disk drive with newly assigned disk letter appears in My Computer. And the player enters into the USB standby mode with Red LED lighting.
- ◆ Then you can execute data transferring. And Red LED flashes during data transferring,
- ◆ Don't eject the player from the PC during transferring.
- ◆ Safely removing the player from the PC after transferring, the player will auto power off.

LED indicator:

1. LED light will be on all the time under the three conditions:

- a. In music idle/pause mode, the blue LED is on.
- b. Connecting the player with PC via USB cable and when the play under the standby Status, the Red LED will be lit on and constantly on.
- c. After the battery charging full, the blue LED is on.

2. Regular flash:

- a. In music playing mode, the blue LED is regular flash.
- b. When player is in USB W/R mode, the Red LED is regular flash.

3. Irregular flash: When the battery of the player is low, the Red LED will flash irregularly.

Auto power off:

In both music idle mode and music pause mode, player will auto. power off if none key is pressed within 3 minutes.

Reset Function

If all keys fail to respond, or if the device connect with the PC and could not find the Disk every once in a while, or if the function performs erratically, perform a system reset by press the reset bottom on backside.

Warning! Pressing the reset button with more than light pressure may permanently disable your device. In addition, resetting your unit erases settings and user-stored information.