

User guide





TABLE OF CONTENTS	Page
NOTICE .....	1
MINIMUM SYSTEM REQUIREMENTS .....	2
OPERATION KEYPADS.....	2
PACKING INCLUDES .....	2
CONNECTING PLAYER TO COMPUTER .....	2
POWER ON & OFF .....	2
MENU ICONS.....	2
MENU FUNCTIONS .....	3
BASIC OPERATION OF THE PLAYER .....	3
VIDEO.....	3
FM TUNER .....	4
EBOOK.....	4
RECORD .....	4
BROWSE.....	5
SETTINGS.....	5
TROUBLESHOOTING GUIDE.....	6
FIRMWARE UPGRADE .....	6
TECHNICAL SPECIFICATIONS .....	6

## Notice

1. Download latest user manual from [www.memup.com](http://www.memup.com) if there is a difference in the instructions given in this manual.
2. Do not disconnect the player when it is being formatted or uploading /downloading data.
3. This product needs to be charged for at least 3 hours before usage. Connect the player to PC to start charging. Once player is fully charged, it will display "Fully Charged" on the screen.
4. Files inside MVIDEO, PHOTO and TEXT folders cannot be viewed from the **Folder**. You can only view the files from Video, Image and Text Operations.
5. Voice and FM can only be viewed from **Folder** when there is wav files in both the folders.
6. The diagrams are for illustration purpose only, the actual screen maybe different from here.
1. The contents of this manual are subjected to changes without prior notices due to product improvement.



## Minimum System Requirements

### Operating System:

- Windows® ME/2000/XP/Vista
- Macintosh™ OS 10.x

### Hardware:






- 20MB Hard Disk Space
- 32MB RAM Memory
- USB port

## Operation Keypads



1. MicroSD Card Slot
2. Scroll Pad
3. Power On/Off Button
4. MicroUSB
5. Earphone Jack
6. Lock Button
7. Play/Pause
8. Menu
9. A-B/●
10. Mic
11. Reset Button



## Packing includes

 <b>MP4 Player</b>	 <b>Earphone</b>	 <b>Video Convertor</b>	 <b>USB Cable</b>	 <b>User Manual</b>
--	--	---	---	---

## Connecting Player to Computer

- Connect the USB port of the player to the computer with the USB cable

## Power On & Off

- To power on the player, press and hold the  button
- To power off the player, press and hold the  button


## Menu Icons





## Menu Functions

- Press **M**
- Nine operations can be selected from the Main Menu
- Use the scroll pad to browse the menu
- Press **>||** to select the desired functions

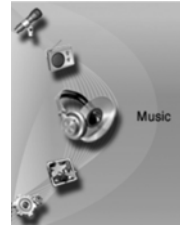

## Basic Operation of the Player

- Press **>||** will either play or pause the file
- Press **▲/▼** to choose the next or previous file
- Use the scroll pad to adjust volume.
- Press and hold for **▲/▼** will Fast Forward or Rewind
- Press and hold **A-B/●** will enter recording except when at Music operation

### Music

#### Music Menu

- Short tap on the **▲** to forward
- Press and hold the **▲** to fast forward
- Short tap on the **▼** to backward
- Press and hold the **▼** to fast backward
- Slide from **▼** to **▲** to increase the volume
- Slide from **▲** to **▼** to decrease the volume
- Press **>||** to Play/Pause
- Press **M** to go back once or go back to Main Menu

#### Setting A-B Clipping

- Press **A-B/●** when you want to start the clipping
- Press **A-B/●** again where you want the clipping to end

#### Synchronous Lyrics

You must ensure the Music file has additional .lrc file on the same folder.

E.g. Song.mp3 and Song.lrc. While playing song, the lyrics will be shown automatically.

### Video

- Inside Memory - Internal Memory of the player
- External Memory - MicroSD Card
- Press **>||** to select either Inside Memory or External Memory to browse for videos
- Short tap on the **▲** to move up / forward
- Short tap on the **▼** to move down / backward
- Slide from bottom arrow to **▲** to move up faster / fast forward
- Slide from top arrow to **▼** to move down faster / fast backward
- Locate the files/folder and press **>||** to play the videos
- Press **M** to go back or go back to Main Menu



## FM Tuner



- Short tap on the **▲** to browse through the operation
- Short tap on the **▼** to through the operation
- Slide from **▼** to **▲** to increase the volume
- Slide from **▲** to **▼** to decrease the volume
- Press **>||** to Play/Pause or enter the operation
- Press **M** to go back once or go back to Main Menu
- Press **A-B/●** to start recording
- FM operation:
  1. Manual - Manually scan for frequency
  2. Auto - Automatically scan and store the frequency
  3. Memory - Store the current frequency to one of the preset channel
  4. Preset - 20 preset channel available
  5. Delete - Delete one of the preset

## Photos



- Inside Memory - Internal Memory of the player
- External Memory - MicroSD Card
- Select either Inside Memory or External Memory to browse for pictures
- Short tap on the **▲** to move up
- Short tap on the **▼** to move down
- Slide from **▼** to **▲** to move up faster
- Slide from **▲** to **▼** to move down faster
- Locate the files/folder and press **>||** to view the pictures
- Press **M** to go back or go back to Main Menu

## Ebook



- Inside Memory - Internal Memory of the player
- External Memory - MicroSD Card
- Select either Inside Memory or External Memory to browse for text
- Short tap on the **▲** to move up
- Short tap on the **▼** to move down
- Slide from **▼** to **▲** to move up faster
- Slide from **▲** to **▼** to move down faster
- Locate the files/folder and press **>||** to play the videos
- Press **M** to go back or go back to Main Menu
- Press **A-B/●** to Bookmark the text

## Record



- Press **>||** to start recording
- Press **M** to stop recording



## Browse



- Inside Memory - Internal Memory of the player
- External Memory - MicroSD Card
- Press >|| to select either Inside Memory or External Memory to browse for text
- Short tap on the ▲ to move up
- Short tap on the ▼ to move down
- Slide from ▼ to ▲ to move up faster
- Slide from ▲ to ▼ to move down faster
- Press **A-B/●** to delete the selected file

## Settings



### Music

#### Repeat Mode

- Once – Normal playing the songs in the memory
- Repeat 1 – Repeat once the songs in the memory
- Folder once – Normal playing the songs in the folder
- Folder Repeat – Repeat once the songs in the folder
- All Once – Normal playing the songs in the memory
- All Repeat – Repeat once the songs in the memory
- Intro – Play for a short time then skip to another song

#### Play Mode

- Normal – Normal playing mode
- Shuffle – Randomly playing the songs

#### EQ Select

- Normal
- 3D
- Rock
- Pop
- Classic
- Bass
- Jazz
- User EQ

User EQ Set – Allow you to set to your desired EQ

#### FM Radio

- Stereo : On / Off

FM Region – Allow you to choose your desire regional FM bandwidth.

### Record

#### REC Quality

- High Quality
- General Quality

REC Volume – Allow you to choose your desired recording volume

#### Auto Browse

- Text – Auto scrolling function
- Photo – Auto slideshow function



## Display

- Backlight – Allow you to set your desired timing for the backlight to switch off
- Luminance – Allow you to set your desired luminance
- Backlight Power – Allow you to set your desired power mode for backlight

## System

- About – Information about the firmware version and the memory space
- Upgrade – For upgrading the player firmware
- Restore Setting – Reset to default factory setting

## PowerOff Time

Allow you to set how long the player will switch off when idle

- Off
- 10Minute
- 15 Minute
- 30 Minute
- 60 Minute
- 120 Minute

## Languages

- English, French, German, Spanish, Portuguese, Italian

## Troubleshooting Guide

1. I couldn't scan any station using FM, what should I do?

Answer : Please ensure the earphone is plugged in properly and try again.

2. My player is fully charged but cannot be powered up.

Answer : Please try to reset the player by pressing the Reset button.

3. How do I know I have inserted the MicroSD card?

Answer : If you have inserted properly, there will be an icon appear on the Now Playing screen or you can check it in Setting -> About

## Firmware Upgrade

- You may download the firmware file and updating procedure from [www.memup.com](http://www.memup.com).
- Please unzip the firmware file
- Please follow the instruction given on the Firmware Upgrade Procedure

## Technical Specifications

Built-In Memory	Up to 8GB
Battery	400mAH Lithium Polymer battery for music listening USB bus powered between 4.6V to 5.0V for data access and charging
LCD Resolution	2.0" TFT, 176x220 pixels
Signal Noise Ratio	>90dB
Extensible capacity	Support Micro SD card up to 4GB
Music Format	SMV, MP3, WMA, WAV
Record Format	WAV
JPEG Format	JPG, BMP
TEXT Format	TXT
SMV Format Conversion	AVI format file (*.avi), Windows® Media format file (*.asf and *.wmv), MPEG1 format file (*.mpg and *.mpeg)
Playback duration (hr)	Music – Up to 11(LCD Off), up to 6(LCD On); Video – Up to 4



**LIMITATION OF LIABILITY AND DAMAGES.**

IN NO EVENT WILL MANUFACTURER AND MANUFACTURER'S RESELLERS (COLLECTIVELY REFERRED TO AS "THE SELLERS") BE LIABLE FOR DAMAGES OR LOSS, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL WILLFUL, PUNITIVE, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL, DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, OR DAMAGES FOR LOSS OF BUSINESS OF ANY CUSTOMER OR ANY THIRD PARTY ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT OR THE SOFTWARES, INCLUDING BUT NOT LIMITED TO THOSE RESULTING FROM DEFECTS IN THE PRODUCT OR SOFTWARE OR DOCUMENTATION, OR LOSS OR INACCURACY OF DATA OF ANY KIND, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF THE PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO THE PARTIES. IN NO EVENT WILL THE SELLERS' TOTAL CUMULATIVE LIABILITY OF EACH AND EVERY KIND IN RELATION TO THE PRODUCT OR ITS SOFTWARE EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PRODUCT.