

User guide






Contents

Notice	1
Minimum System Requirements	1
Operation Touch-Pads	1
Packing includes	2
Connecting Player to Computer	2
Power On & Off	2
Menu Icons	2
Menu Functions	2
Basic Operation of the Player	2
Video	3
FM Radio	3
Photo	3
EBook	4
Record	4
Browser	4
Settings	5
Extras	5
Firmware Upgrade	Erreur ! Signet non défini.
Troubleshooting Guide	Erreur ! Signet non défini.

Notice

1. Do not disconnect the player when it is being formatted or uploading/ downloading data.
2. This product needs to be charged for at least 3 hours before usage. Connect the player to the PC to start charging. Once player is full charged, the battery logo will display  "Fully Charged".
3. The diagrams are for illustration purpose only, the actual screen maybe different from here.
4. The contents of this manual are subjected to changes without prior notices due to product improvement.

Minimum System Requirements


Operating System:

- Windows® ME/2000/XP/Vista
- Macintosh™ OS 10.x

Hardware:

- 20MB Hard Disk Space
- 32MB RAM Memory
- USB port
-

Operation Touch-Pads

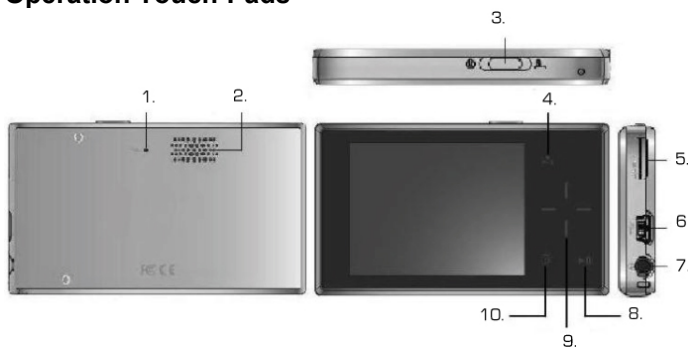

1. Mic
2. Speakers
3. On/Off & Hold button
4. A/B record
5. MicroSD card reader
6. Mini USB port
7. Earphones jack
8. Play/Pause
9. Navigation Touch pad
10. Menu



Packing includes

MP4 Player	Earphone	MediaC order	USB Cable	User manual

Connecting Player to Computer

➤ Connect the USB port of the player to the computer using the USB cable provided



Power On & Off

- To power on the player, slide the button to
- To power off the player, slide and hold



Menu Icons



Menu Functions




- Press
- Nine operations can be selected from the Main Menu
- Use the navigation touch-pad to browse the menu
- Press to select the desired functions



Basic Operation of the Player

- Press will either play or pause the file
- Press Left/Right to choose the next or previous file
- Press Up/Down to adjust volume.
- Press and hold Left/Right for Fast Forward or Rewind
- Press and hold will enter recording except when at Music operation

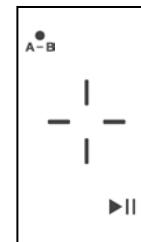

Music



Music Menu

➤ This option let you search for a song through various means:

- ❖ Play All
- ❖ Artist
- ❖ Album
- ❖ Genre
- ❖ Year
- ❖ Recorded List
- ❖ FM record List
- ❖ All Audio Tracks
- ❖ Favourite
- ❖ Now Playing

At the Music Interface, press and hold on to for the operations to appear.



Add to favourite

- Add the selected song to the favourite playlist

EQ

- Press Up/Down **|** to select the desired EQ
- Press **▶||** to set the EQ

PlayMode

- Press Up/Down **|** to select the desired Playmode.
- Press **▶||** to set the Playmode
 - ❖ **Normal**: Play all files sequentially once
 - ❖ **Repeat One**: Play current file repeatedly
 - ❖ **Repeat All**: Play all files sequentially and continuously
 - ❖ **Random**: Play all files randomly and continuously



Video



Video Menu

- Play All (It will play all the video files in the player)
- Internal Media (Browse through the internal media for video files)
- External Media (Browse through the external media for video files)

Play Video

- Press Up/Down **|** to select the desire video file
- Press **▶||** to play the video

FM Radio



Press **▶||** to navigate the preset channel.

Preset Actions

- Add to preset: Add the current station to a preset channel
- Tune to preset: Tune to the preset channel

Delete

- This option let you delete a preset
- Select **Yes** to enter the Delete function, **No** to return to previous menu
- Press Left/Right **—** to select the desired present
- Press **▶||** to delete

Auto Search

- It will automatically search and save all available stations

Manual Search

- This option will search and stop when there is an available station without saving

Record


- This option will let you record the current FM

Photo



Photo Menu

- Play All (It will play all the picture files in the player)
- Internal Media (Browse through the internal media for pictures files)
- External Media (Browse through the external media for pictures files)

At the Photo Interface, press and hold on to  for the operations to appear.



Pan & Zoom

- This option will allow you to pan and zoom the picture
- Press and release Left/Right – to Zoom in/out, press and hold Left/Right – to Pan

Slideshow

- This option activates the slides show

Slideshow Interval

- This option set the interval between the images

Thumbnail

- Show all the pictures in thumbnail

Manual View Mode

- Manually go to the next photo by pressing left/right –

Full Screen On/Off

- Select this option to fully display the photo

EBook



At the EBook interface, press ►|| will let you view the selected text file.

When reading the Text, press ►|| to start playing the music in the playlist or FM Radio.

Record



At the Record interface, press and hold 📁 will enter the Record Operation.

Note: Once you enter Record, it will start recording

Record

- This option will start the recording

Pause

- This option will pause the recording

Record saved

- This option will save the recording

Record Cancel

- This option will cancel the recording

Record Settings

- Encoder: Selecting what type of format the player will record in
- Device: Select Internal or External, where the recorded file will be stored in
- Rate: Select from different sample rate as the desired setting

Browser



Internal Media

- This option accesses the internal storage of the MP3 player

External Media

- This option accesses the external storage, MicroSD Card, of the MP3 player



Settings



Speaker On/Off

- Press **▶||** to switch On/Off the speaker

EQ

- Select Normal, Classical, Jazz, Pop, Rock or Custom as the desired EQ

Volume

- Different volume level Normal (1-40) and High (1-50) available

Brightness

- Set the brightness level
 - ❖ Press left/right **←** to decrease or increase the brightness

Display Skin

- Select Plain Black, Black, Green and Red as the desired theme

Slides Interval

- Press left/right **←** to decrease or increase the interval between slides

Record Settings

- Encoder
 - ❖ Select MS ADPCM or PCM as the desired encoding
- Device
 - ❖ Select Internal or External as the desired storage device
- Rate
 - ❖ Select from different sample rate as the desired setting

Language

- Selecting the desired language (*Optional*)

Power Save

- Display off
 - ❖ Press left/right **←** to decrease or increase the display off timing
- Backlight Dim
 - ❖ Press left/right **←** to decrease or increase the dimming timing
- Auto Shutdown
 - ❖ Press left/right **←** to decrease or increase the shutdown timing

Set Time/Date

- Set the time and date
- Press **▶||** to select and Left/Right **←** to increase/decrease the date/time

Format Drive

- Format the player internal & external flash memory

Factory Setting

- Restore the player to factory default setting

Sensor Sensitivity

- Choose the touch-pad sensitivity from Low, Mid or High



Extras

Alarm

- Set the alarm

Calendar

- This option lets you view the date and time in the player



About

This option lets you view the following information.

- Player firmware version
- Internal memory storage information
- External memory storage information

Firmware Upgrade

1. You may download the firmware file and updating procedure from www.memup.com.
2. Please unzip the firmware file.
3. Please follow the instruction given on the **Firmware Upgrade Procedure**.

Troubleshooting guide

1. I couldn't scan any station using FM, what should I do?
Answer : Please ensure the earphone is plugged in properly and try again.
2. My player is fully charged but cannot be powered up.
Answer : Please try to reset the player by pressing the Reset button.
3. How do I know I have inserted the MicroSD card?
Answer : If you have inserted properly, there will be an icon appear on the Now Playing screen or you can check it in Extra -> About
4. My touch-pad is not working.
Answer : Please switch the player off and on again.

Technical Specifications

#This product is able to play AVI files encoded in MPEG4 (Simple or Advance Simple profile) with mp3 audio. For WMV, the video must be encoded in VC1 (Simple or Main Profile) with WMA audio. Other formats, for example divx, xvid, mp4 etc, may be transcoded with the bundled software given in the Player.

Technical Specifications

Built-In Memory	Up to 8GB
Battery	Li-Polymer battery
LCD Resolution	2.4" TFT screen, 320x240 pixels
Signal Noise Ratio	>90dB
Earphone output	10mW+10mW (32ohm)
Music Format	SMV, MP3, WMA, WAV
Record Format	WAV
JPEG Format	JPG, BMP
TEXT Format	TXT
SMV Format Conversion	AVI format file (*.avi), Windows® Media format file (*.asf and *.wmv), MPEG1 format file (*.mpg and *.mpeg)
USB	USB 2.0 Full-Speed (Up to 12Mbps)

LIMITATION OF LIABILITY AND DAMAGES.

IN NO EVENT WILL MANUFACTURER AND MANUFACTURER'S RESELLERS (COLLECTIVELY REFERRED TO AS "THE SELLERS") BE LIABLE FOR DAMAGES OR LOSS, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL WILLFUL, PUNITIVE, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL, DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, OR DAMAGES FOR LOSS OF BUSINESS OF ANY CUSTOMER OR ANY THIRD PARTY ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT OR THE SOFTWARES, INCLUDING BUT NOT LIMITED TO THOSE RESULTING FROM DEFECTS IN THE PRODUCT OR SOFTWARE OR DOCUMENTATION, OR LOSS OR INACCURACY OF DATA OF ANY KIND, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF THE PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO THE PARTIES. IN NO EVENT WILL THE SELLERS' TOTAL CUMULATIVE LIABILITY OF EACH AND EVERY KIND IN RELATION TO THE PRODUCT OR ITS SOFTWARE EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PRODUCT.