

User guide





TABLE OF CONTENTS	Page
OPERATION BUTTONS .....	2
MENU FUNCTIONS .....	2
MUSIC OPERATION .....	2
RECORD OPERATION .....	3
FM OPERATION .....	3
SYSTEM SETTINGS .....	3
SETTING EQUALIZER.....	3
SETTING REPEAT MODE .....	4
FOLDER OPERATION .....	4
SETTING A-B CLIPPING .....	4
PICTURE OPERATION .....	4
VIDEO OPERATION.....	4
TEXT OPERATION .....	4
CONNECTING PLAYER TO COMPUTER .....	4
CONVERT VIDEO FILES TO SMV .....	5
FIRMWARE UPGRADE .....	5
TROUBLESHOOTING GUIDE .....	5
TECHNICAL SPECIFICATIONS .....	5

## Notice

1. Download latest user manual from [www.memup.com](http://www.memup.com) if there is a difference in the instructions given in this manual.
2. Do not disconnect the player when it is being formatted or uploading /downloading data.
3. This product needs to be charged for at least 3 hours before usage. Connect the player to PC to start charging. Once player is fully charged, it will display "Fully Charged" on the LCD.
4. Files inside MVIDEO, PHOTO and TEXT folders cannot be viewed from the **Folder**. You can only view the files from Video, Image and Text Operations.
5. Voice and FM can only be viewed from **Folder** when there is wav files in both the folders.



## Operation Buttons



### Package Includes

Player with the conversion tool and utilities included, USB Cable, Earphone, Quick user guide

### Power On/Off and Lock/Unlock Player

- To **power on** the player, press **>||**.
- To **power off** the player, press and hold **>||**.
- To **Lock/Unlock** the player, press **Vol -** (left side) and **A-B/R** (right side) at the same time.

### Minimum System Requirements

Operating System: Windows® 98/98SE/ME/2000/XP/Vista or Macintosh™ OS 10.x

Hardware: 20MB of free disk space, 4x CD-ROM or higher, USB port

## Menu Functions

Press **M** to go to Main Menu. Pressing **M** again will go to Music mode.

You can select **Music, FM Tuner, Record, Images, Video, Text, Folder, Settings** and **About**.

You can navigate Main Menu by pressing **<** or **>**. Press **>||** to enter.

1. Choose **Music** will go to music mode to enjoy your MP3/WMA songs.
2. Choose **FM Tuner** will go to radio mode.
3. Choose **Record** will go to voice recording mode.
4. Choose **Images** will go to picture viewing mode for JPG/BMP format only.
5. Choose **Video** will go to video mode to view movie of SMV format only.
6. Choose **Text** will go to text file reading.
7. Choose **Folder** will allow you to view different folders.
8. Choose **Settings** will go to system settings mode.
9. Choose **About** for player information.

## Music Operation

1. By default, player will always resume from Music mode. From Main Menu, navigate to **Music**.
2. Press **>||** will either play or pause the song.
3. Press **<** or **>** to choose to the next or previous song.
4. Press **▲** or **▼** at the side of the player to adjust volume.
5. Press and hold **<** or **>** to fast forward or rewind.



### Synchronous Lyrics

You must ensure the Music file has additional. LRC file on the same folder. E.g. Song.mp3 and Song.LRC. While playing song, the lyrics will be shown automatically.

### Record Operation

1. From Main Menu, navigate to **Record**. You will see the Record settings.
2. To change setting, press **>||**. To go to next setting, press **<** or **>**.
3. To start, go to **Start record** and press **>||**. To save recording, press **M**.

Note: Playlist will be re-created whenever newly recorded file is saved to the player.

Listening recorded files

1. From **Main Menu > Folder > By Folders**, press **>||** to locate **VOICE** folder.
2. Press **>||** to enter and you can now play the file.

### FM Operation

#### Adjusting and Saving Frequency

1. From Main Menu, navigate to **FM Tuner**. You can preset 20 fixed channel and navigate using **<** or **>**.
2. To auto search and save all available stations, press **>||** to select **Auto Scan**.
3. To search manually, press **>||** to select **Manual Scan**. Press and hold **Left/Right** to scan for available station, press **>||** to save.

#### Recording FM

Press and hold **A-B/R** to start recording. Press **M** to save recording and return to radio mode. You can listen to the file under **Music** mode.

Note: Playlist will be re-created whenever newly recorded file is saved to the player.

#### Delete FM Channel

Press **>||** to select **Delete Preset**.

To exit FM mode, press **M**.

### System Settings

From Main Menu, navigate to **Settings** mode. Press **<** or **>** to navigate between settings.

Press **>||** to enter the following operations:

<b>EQ</b>	Set the equalizer for the music
<b>PlayMode</b>	Set the repeat mode for the music
<b>Language</b>	Set the languages for Menu display
<b>Display skin</b>	Set the color for the player display appearance
<b>Display Off</b>	Set the duration for the display to turn off
<b>Idle Off</b>	Set the duration player will turn off automatically during idle period.
<b>Slideshow</b>	Set the scheme for displaying pictures.
<b>Exit</b>	Exit to Main Menu

### Setting Equalizer

1. From Main Menu, navigate to **Settings > EQ**.
2. Choose **Normal, Rock, Pop, Classical, Jazz, Treble, Bass or User EQ**.



### Setting Repeat Mode

From Main Menu, navigate to **Settings > PlayMode**. Below are the descriptions.

- Normal:** All music files will play sequentially once.  
**Repeat Track:** Repeat current file repeatedly.  
**Repeat All:** All music files will play sequentially and continuously.  
**Shuffle Once:** All music files will play randomly once.  
**Shuffle Repeat:** All music files will play randomly and continuously.

### Folder Operation

1. From Main Menu, navigate to **Folder**.
2. You will see **By Folders, Play ALL and Exit**.
3. Press **>||** to open "By Folders". Press **M** to go back one level. Press **<** or **>** to navigate between files. Press **>||** to play the file.

Note: You will not be able to see PHOTO, MVIDEO and TEXT folders in the **Folder** menu.

### Setting A-B Clipping

1. While playing music, press **A-B/R** to select A-B Clipping mode. You will see A->, press **A-B/R** to select the end point. The particular portion will repeat continuously.
2. Press **A-B/R** to exit.

### Picture Operation

1. From Main Menu, navigate to **Images** mode. You can view either BMP or JPG.
2. Press **>||** to view the files.

Note: All image files must be put into **PHOTO** folder.

### Video Operation

1. From Main Menu, navigate to **Video** mode.
2. Press **>||** to view the files.

Note: All video files must be put into **MVIDEO** folder.

### Text Operation

1. From Main Menu, navigate to **Text** mode.
2. Press **>||** to view the files.

Note: All text files must be put into **TEXT** folder.

### Connecting Player to Computer

1. Connect the USB port of the player to the computer using the USB cable provided.
2. **Please take note if you are using Windows® 98 Second Edition, YOU MUST INSTALL THE DRIVER PROVIDED IN THE INTERNAL MEMORY.** For user using Windows® Millenium/2000/XP/Vista, your computer will install the driver automatically.
3. You will be able to locate the player under **My Computer > Removable Disk**.
4. Double-click on it to open up. You can drag and drop your music files here.

Note : all the video files have to be converted. K-Slim cannot read native avi files.



## Convert video files to SMV

1. In the player, locate the file **video2smv.exe**.
2. Click on **Add** to select the source audio/video file to convert.
3. Use 128x160 resolution for best viewing.
4. Press **Convert** to do the conversion.

## Firmware Upgrade

1. You may download the firmware file and updating procedure from [www.memup.com](http://www.memup.com).
2. Please unzip the firmware file.
3. Please follow the instruction given on the [Firmware Upgrade Procedure](#).

## Troubleshooting Guide

1. My Windows® 98 Second Edition cannot detect the player? What should I do?  
 Answer: Please install the driver provided in the player first. Then connect up the player using USB cable to your computer.
2. I couldn't scan any station using FM, what should I do?  
 Answer: Please ensure the earphone is plugged in properly and try again.
3. My player is fully charged but cannot be powered up.  
 Answer: Please try to reset the player by pressing **Reset**.
4. Why can't I upgrade the firmware in Win 98SE/ME?  
 Answer: The firmware downloader does not support in Win 98SE and Win ME.

## Technical Specifications

Built-In Memory	Up to 4GB
Battery	Li-Polymer battery
LCD Resolution	1.8" CSTN, 128x160 pixels
Signal Noise Ratio	>90dB
Earphone output	10mW+10mW (32ohm)
Music Format	SMV, MP3, WMA, WAV
Record Format	WAV
JPEG Format	JPG, BMP
TEXT Format	TXT
SMV Format Conversion	AVI format file (*.avi), Windows® Media format file (*.asf and *.wmv), MPEG1 format file (*.mpg and *.mpeg)
USB	USB 2.0 Full-Speed (Up to 12Mbps)

## LIMITATION OF LIABILITY AND DAMAGES.

IN NO EVENT WILL MANUFACTURER AND MANUFACTURER'S RESELLERS (COLLECTIVELY REFERRED TO AS "THE SELLERS") BE LIABLE FOR DAMAGES OR LOSS, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL WILLFUL, PUNITIVE, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL, DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, OR DAMAGES FOR LOSS OF BUSINESS OF ANY CUSTOMER OR ANY THIRD PARTY ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT OR THE SOFTWARES, INCLUDING BUT NOT LIMITED TO THOSE RESULTING FROM DEFECTS IN THE PRODUCT OR SOFTWARE OR DOCUMENTATION, OR LOSS OR INACCURACY OF DATA OF ANY KIND, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF THE PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO THE PARTIES. IN NO EVENT WILL THE SELLERS' TOTAL CUMULATIVE LIABILITY OF EACH AND EVERY KIND IN RELATION TO THE PRODUCT OR ITS SOFTWARE EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PRODUCT.